

HOT WATER INSTRUCTIONS

1/21 ROWELL AVE

SHOWER

The bathroom shower-head has an adjustable spray pattern. Rotate the ring around the shower-head nozzles to select the desired spray pattern.

SOLAR STORAGE TANK WITH BOOSTER

The hot water service is solar with an off-peak electric booster. The electric booster is programmed to run at night if there hasn't been enough sunlight during the day, and periodically to sterilise the water against bacteria. At other times, hot water is provided by circulating water through the solar panel on the roof during the day, and storing it for when it is required.

WHEN GOING ON HOLIDAY

You can disable the off-peak booster to save a bit of power when going on holiday. Walk around to the **main electricity meter box** on the north side of the building, and turn off the switch labeled **HOT WATER**. Turn the switch back on when you return.

Never turn off or unplug the solar controller in the rear courtyard of the unit (attached to the hot water tank). It needs to remain plugged in to protect the solar panel against frost or overheating, even when the system is not in use.