

GDS OUTDOOR GATE LOCK (CAM SYSTEM) USER INSTRUCTIONS

TO EXIT

No key is required.

1. Open the gate normally by operating the existing internal latch.
2. Close the gate behind you and make sure the gate latches securely.

The gate is now locked.

MAINTENANCE

- Lubricate the lock with silicone grease only.
- If lock should become inoperative replace or tighten the latch-coupling cord. Use flexible polyester woven clothes-line cord or similar. Do not use wire.

NOTE TO INSTALLER


Please leave these instructions with the end user for installations with an *anti-clockwise* key-turn.

TO ENTER

A key is always required to open the gate from outside.

1. Insert key with the key-blade pointing up.
2. Rotate key anti-clockwise slightly to release the latch.

ATTENTION: *Never force the key. If key does not turn easily, push and/or pull on the gate (not the key) to help ease the latch on the other side.*

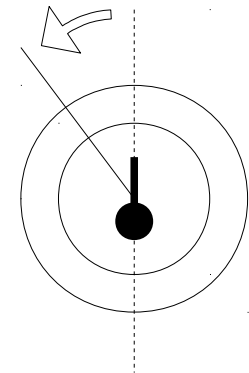

3. Open the gate while holding the key in position.
4. Return the key to vertical position, then remove the key from the lock.
5. Close the gate behind you and make sure the gate latches securely.

The gate is now locked.

